

Recommendation for correct servo installation to flaps for Ceres, Ceres Lift and Big Ceres:

1. make the servo bar from original circular bar:



2. copy hole position to second bar:




3. grind away impedimentary plastic:



4. modify metal bar:



5. set together servo with bearing:

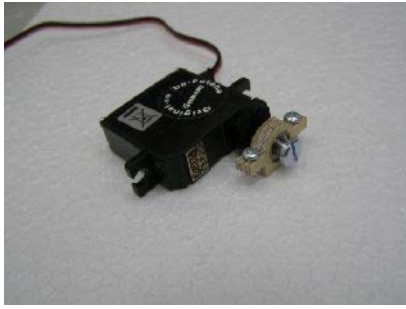

6. correct positin of servo whenne flaps is in position 0:



7. use rubber ring or other safety lock:

